

FIG. 1

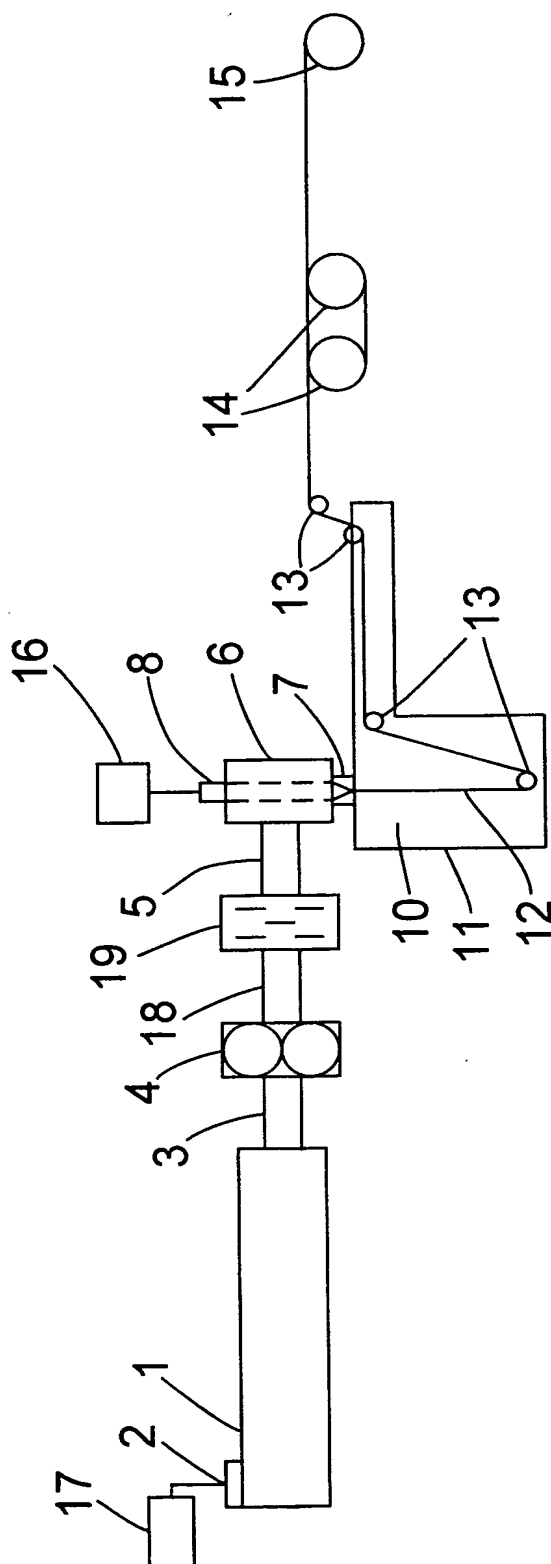


Fig.1

FIG. 2

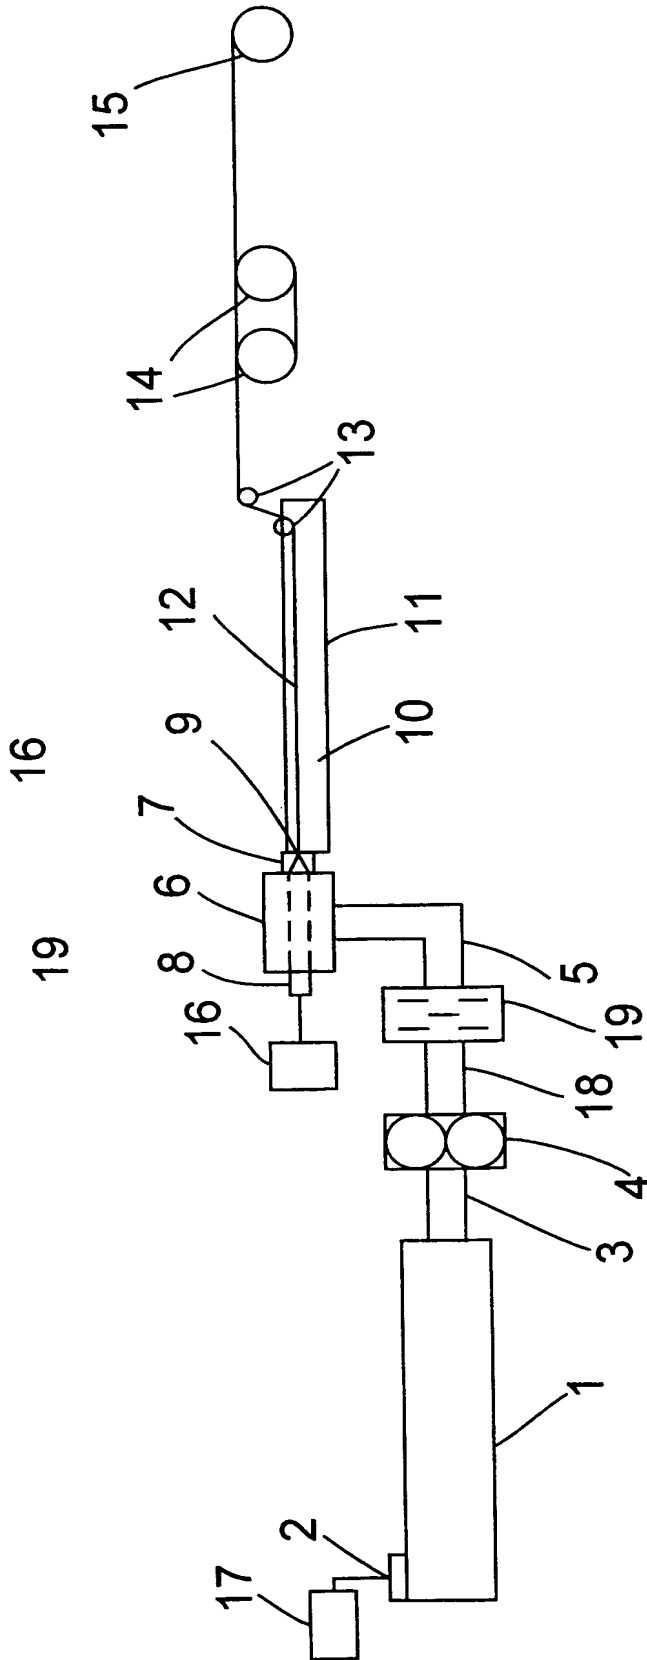


Fig.2

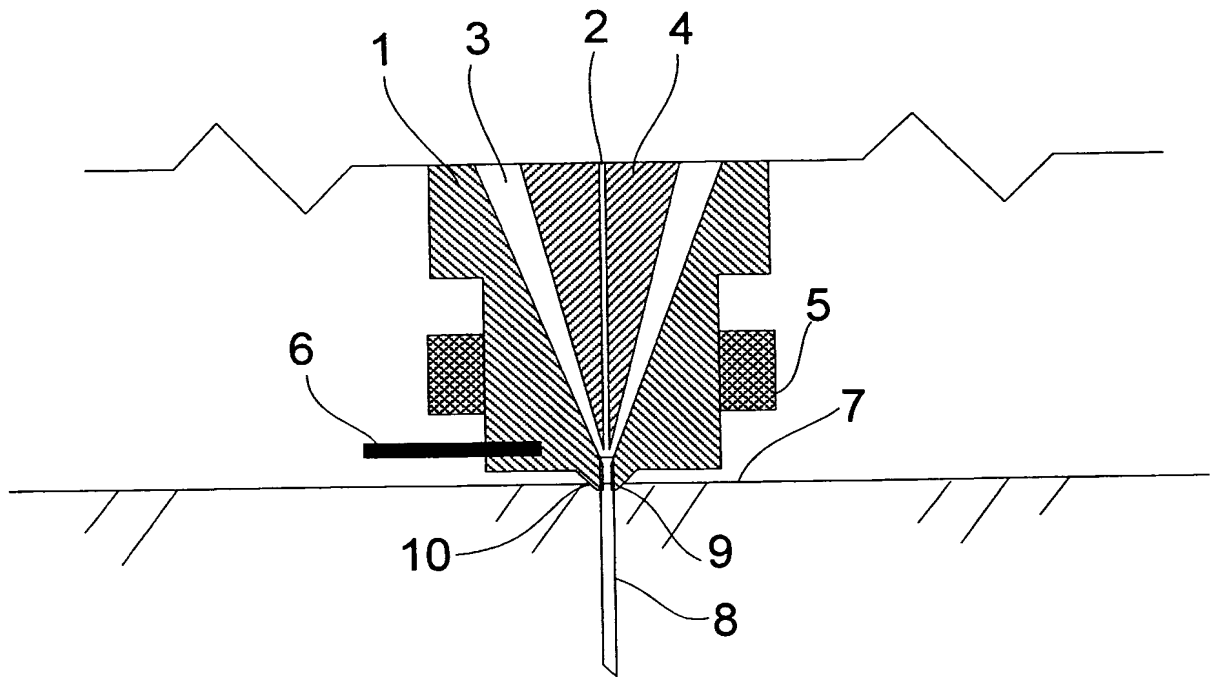


Fig.3

FIG. 3

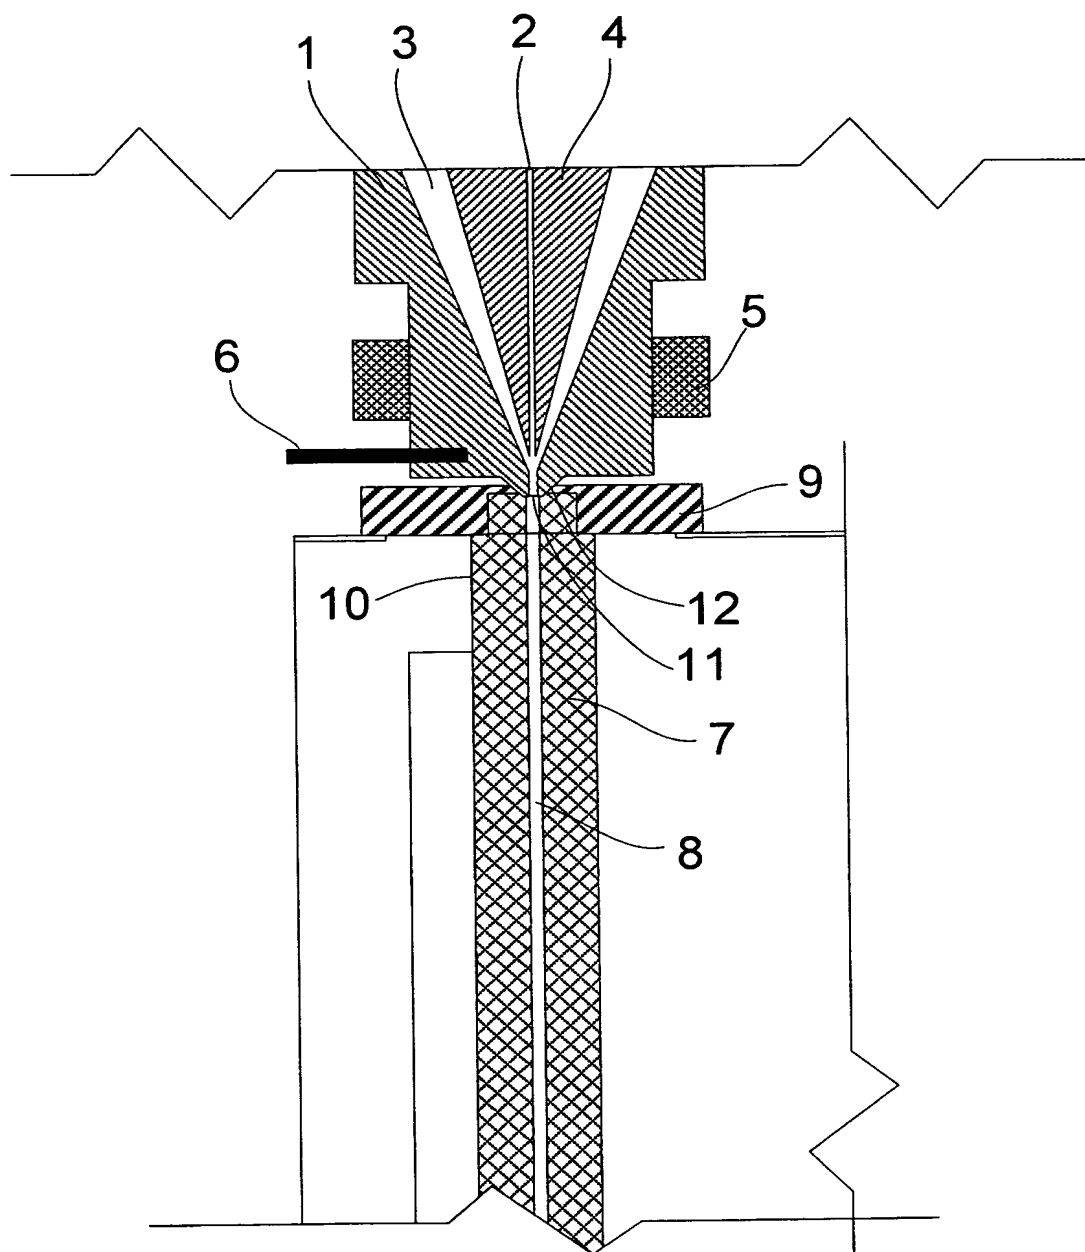


Fig.4

TOP 2.0" BOTTOM 650

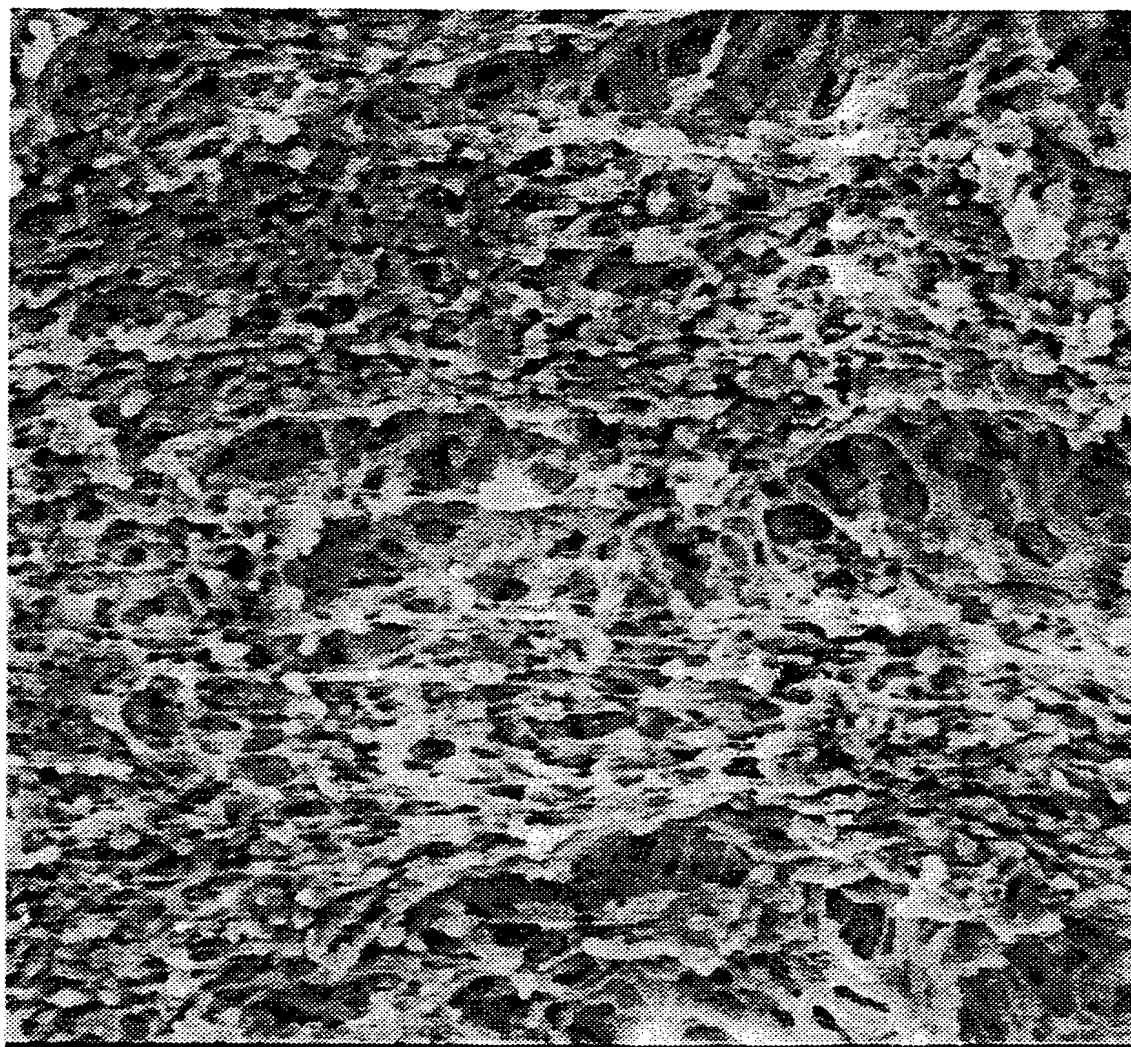


Fig.5

5/13

FIG. 6

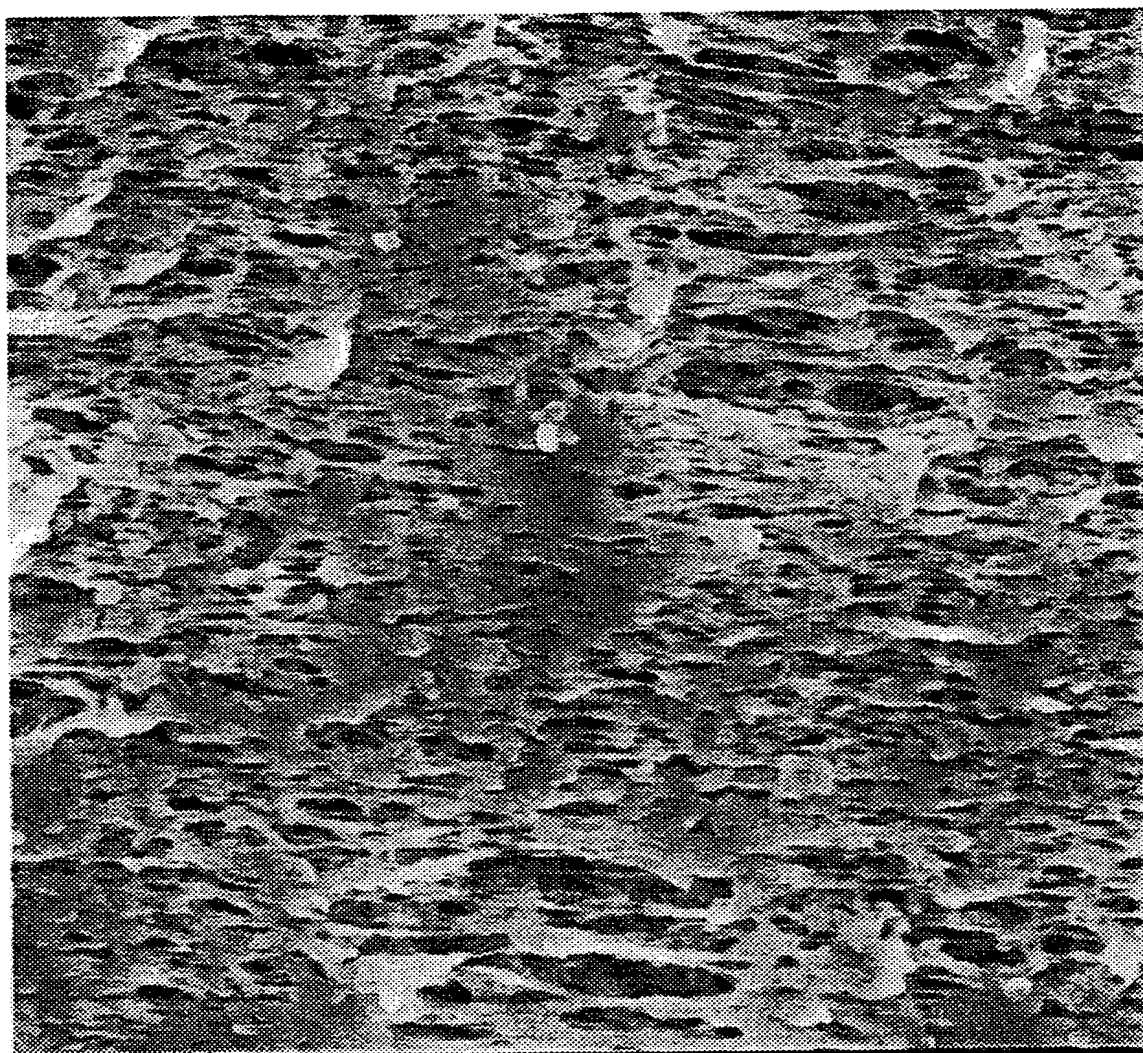


Fig.6

6/13

09390109 072601

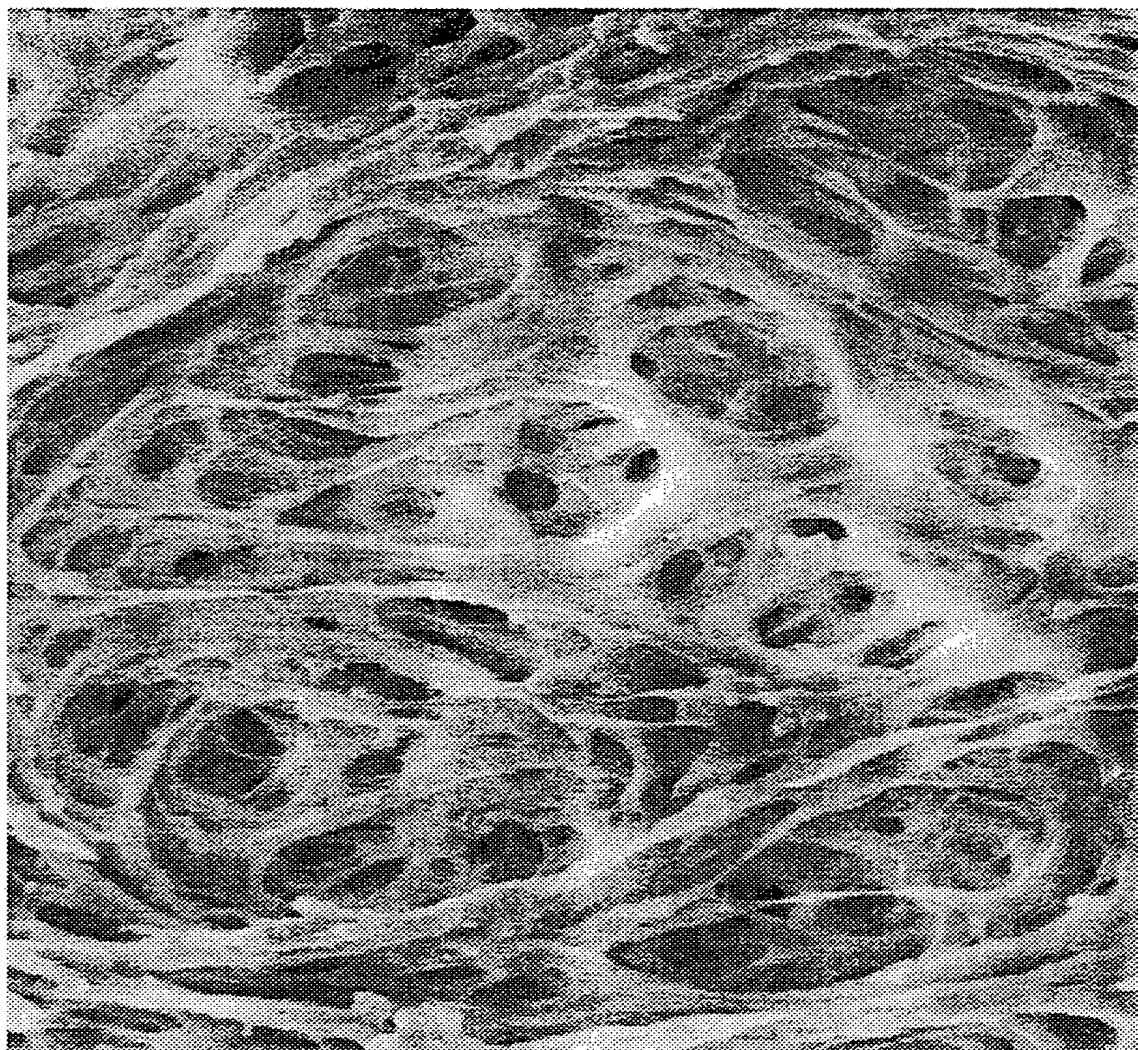


Fig.7

7/13

SUBSTITUTE SHEET (RULE 26)

T09220"60T06B60

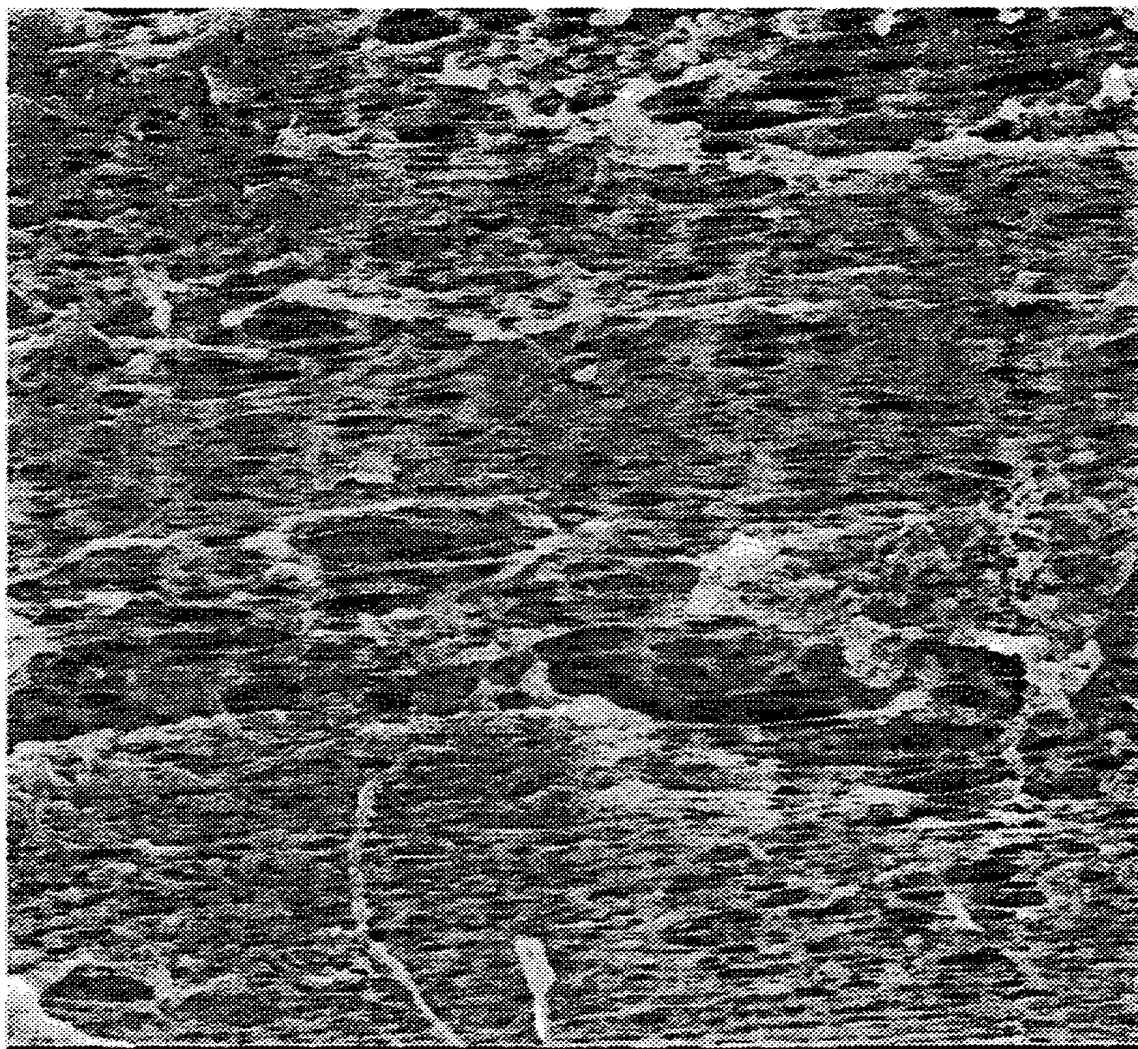


Fig.8

8/13

109220"60706860

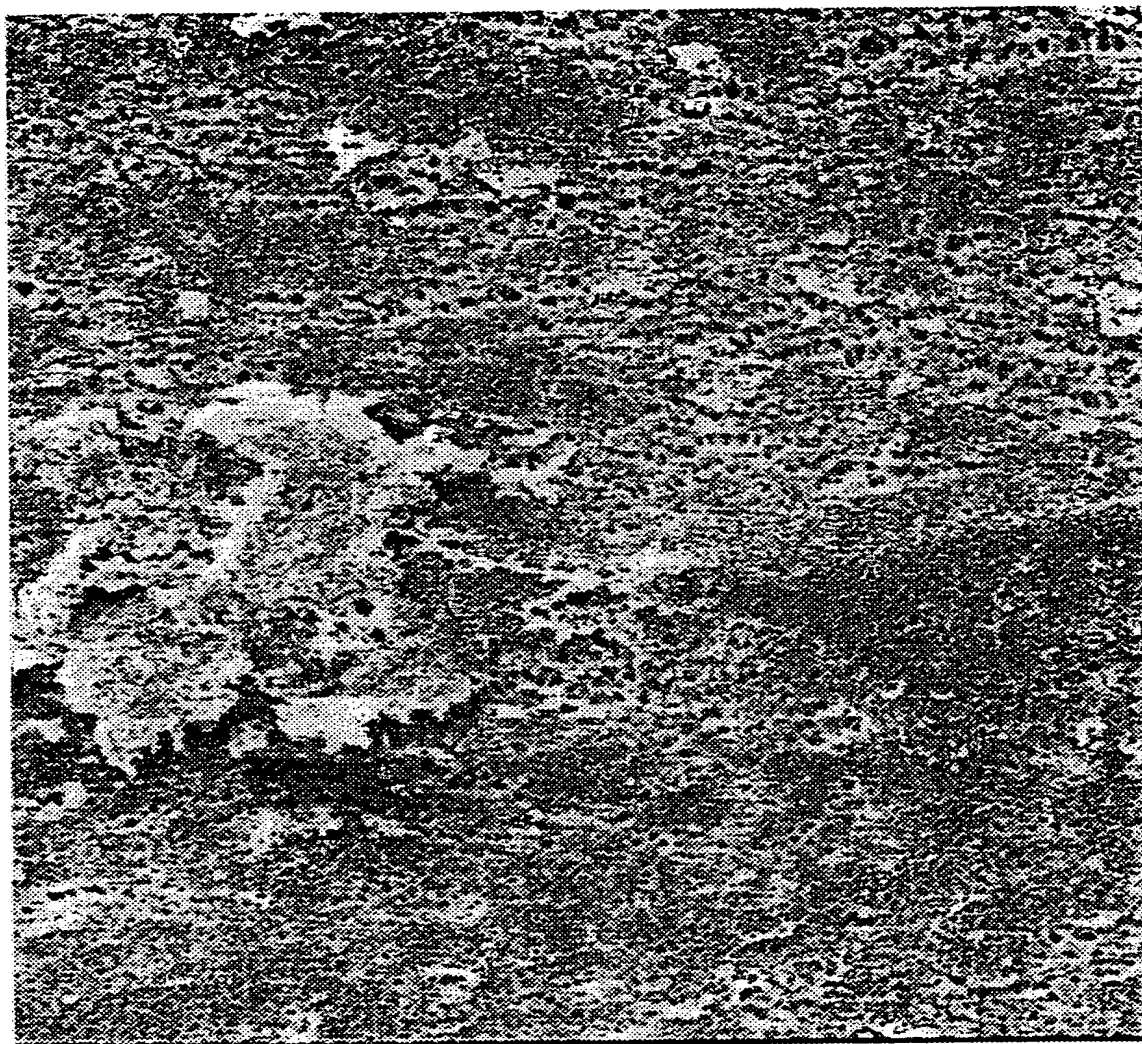


Fig.9

9/13

09890109.07604
T09240" 60T06860

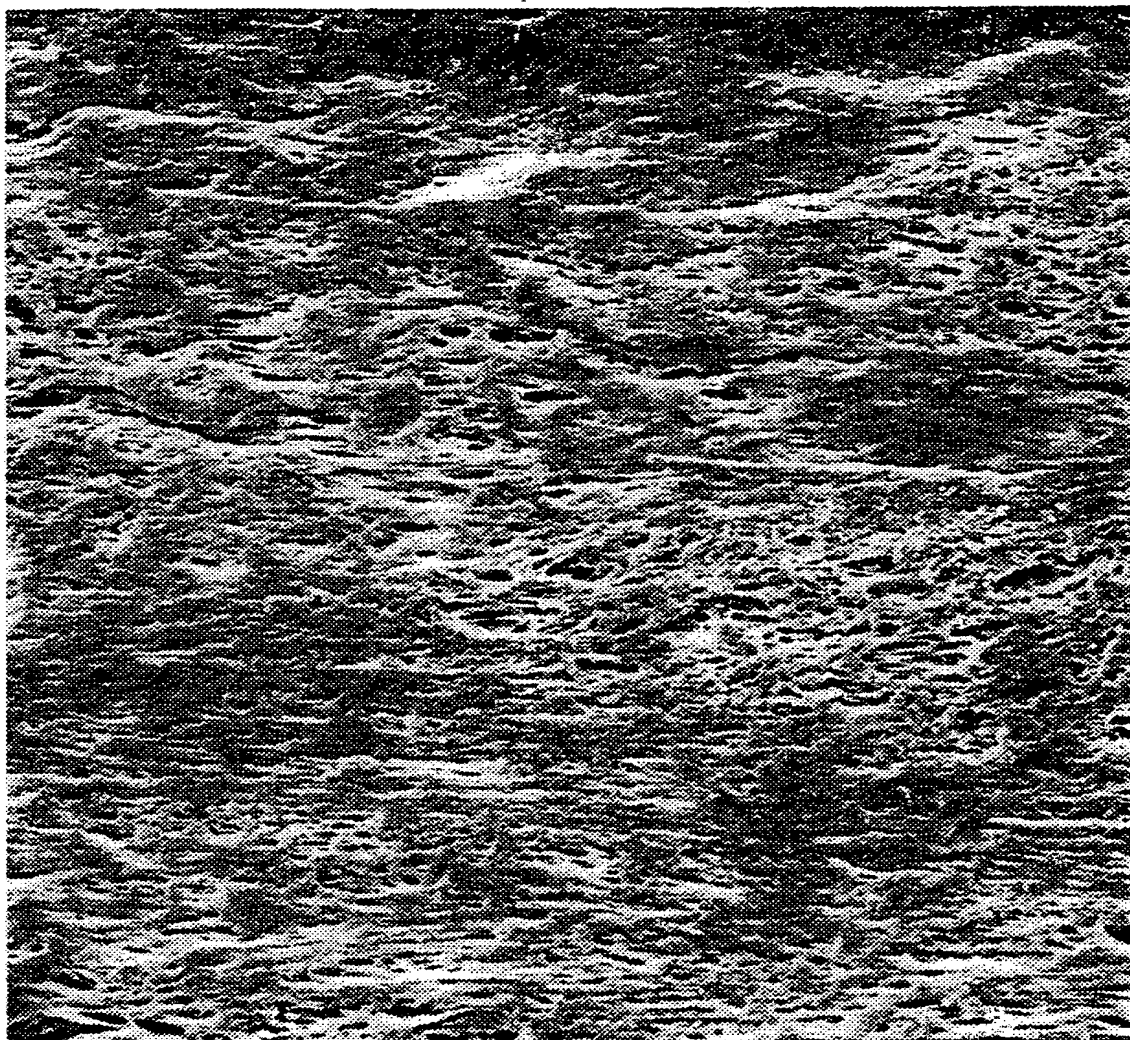


Fig.10

10/13

SUBSTITUTE SHEET (RULE 26)

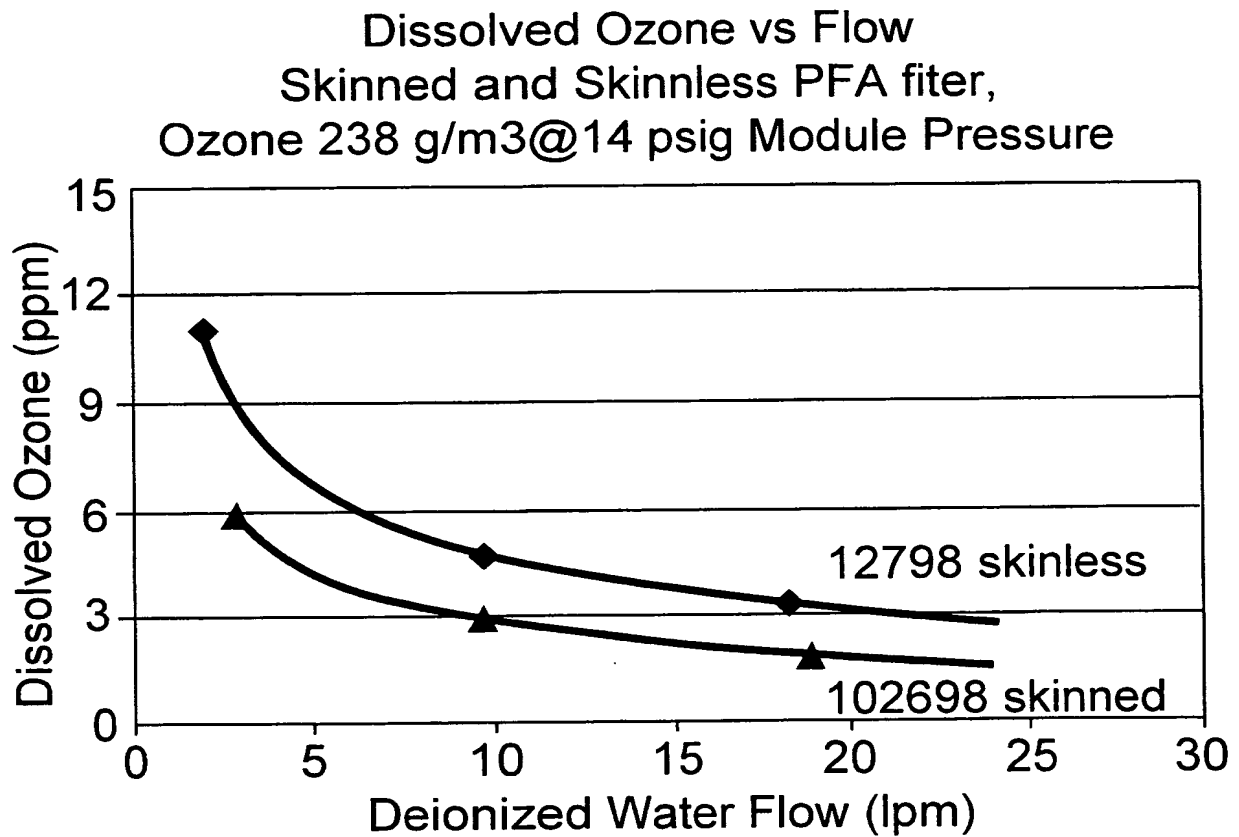


Fig.11

11/13

FIG. 12

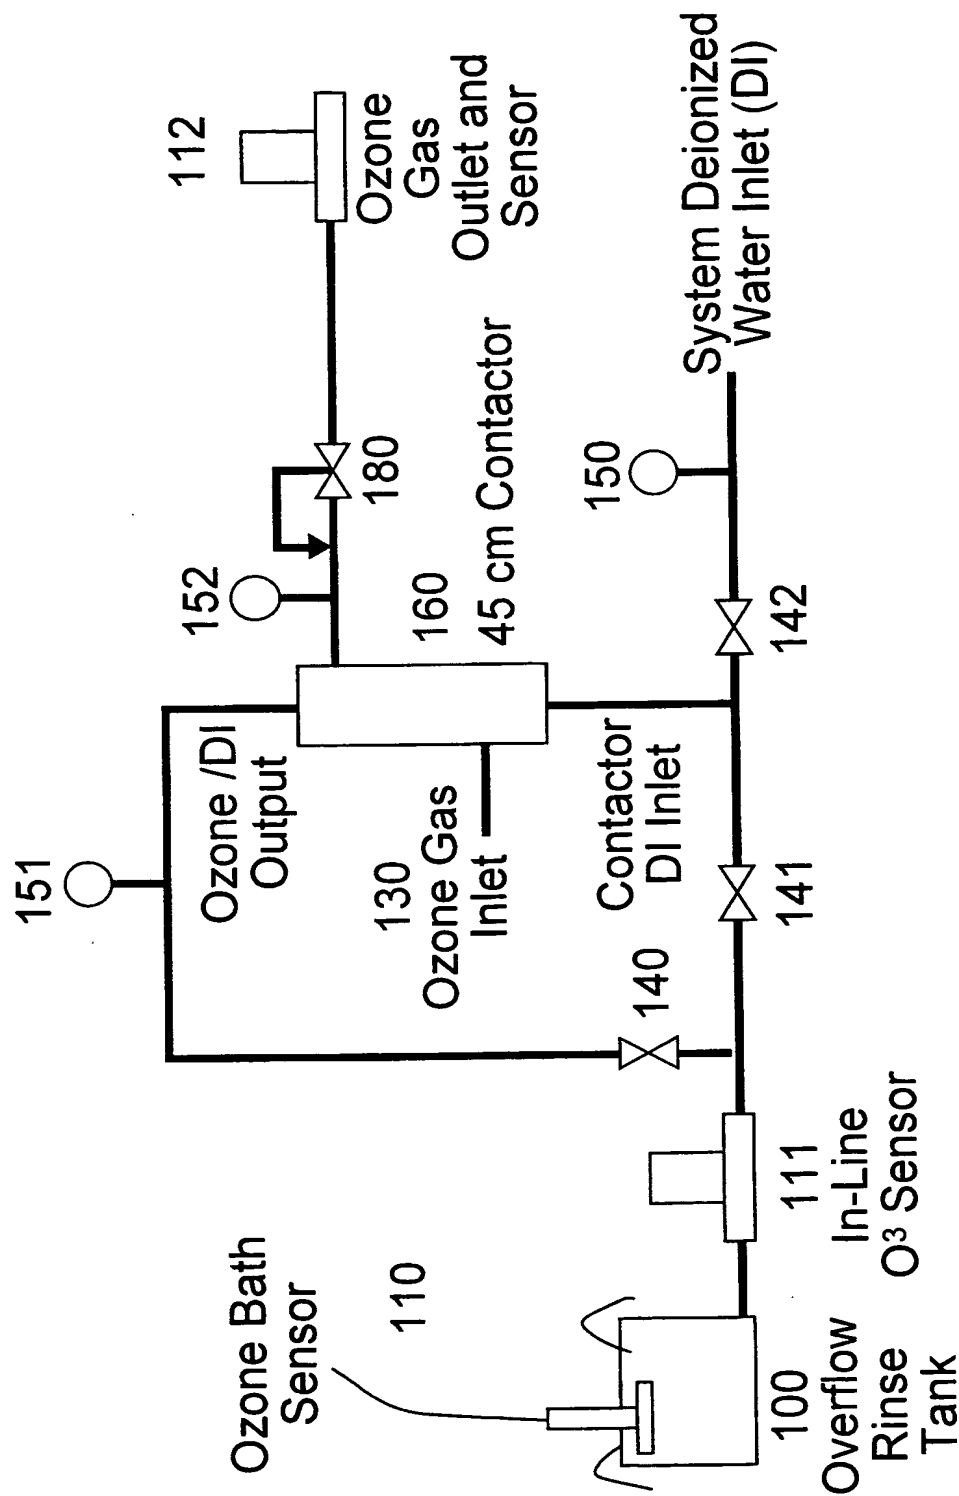


Fig.12

T09220" 60T06860

Mass Transfer Efficiency - Sh vs Pe
PFA Hollow Fiber Skinned vs Skinless

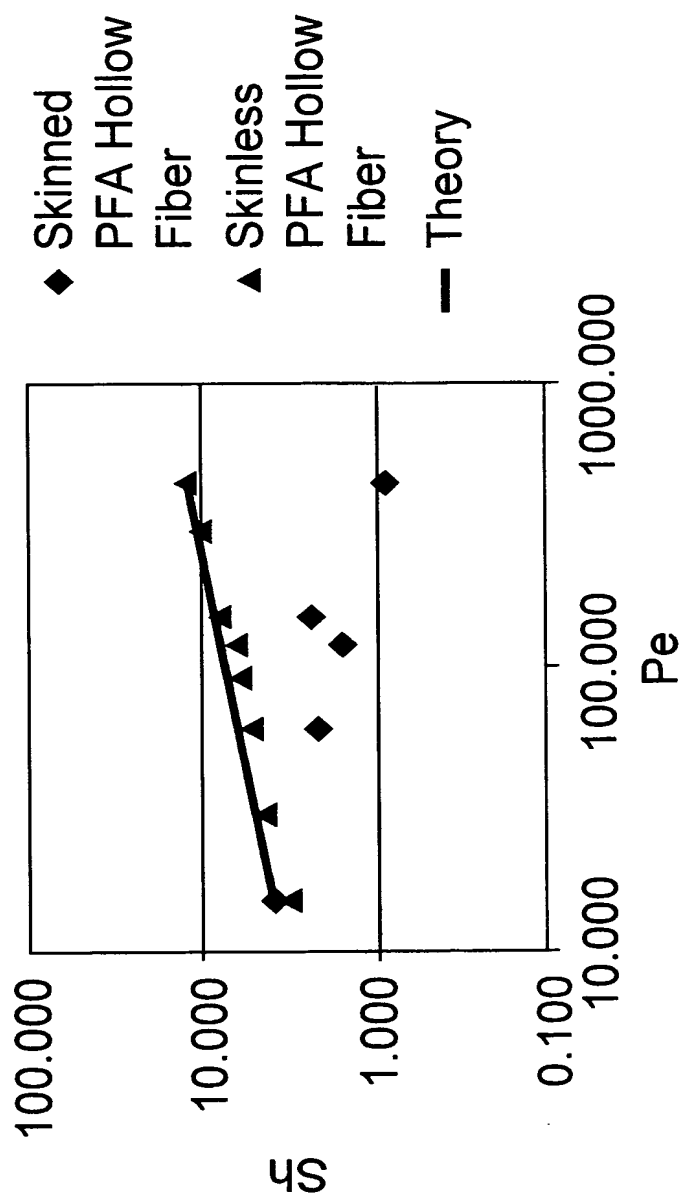


Fig.13